ASSEMBLY INSTRUCTIONS

MODEL#: W6917

NOTE: Only the technical personnel can be allowto fix and maintain.

IMPORTANT!

Make sure that the power is switch off at the electricity mains supply before commencing work.

FIXING INSTRUCTIONS

. Open parts according to the bag as shown in figure B shows, installed hangs Taiwan screw, and should be fixed to the ceiling in the right place.
2. Ground Connection (See picture 1): there are one tapping hole & two dimples.
Find the supply ground wire (2) on the green ground screw (15) and then put t into
tapping hole. Connect the fixture ground wire (3) with supply ground wire 2) by connecting terminal (12). Caution: DO NOT connect ground wire with upply power wire.
. Connect fixture supply wire with power supply wire . Caution: Remember o distinguish the positive and negative charges. (See picture 2)
. Push canopy up to the ceiling and Lock cuttlefish nut

REPLACEMENT BULB

o not exceed the maximum wattage.
ight bulbs recommended: W6917 G4-19*10W Max. Type G4.

LEANING CARE

lean with a soft dry cloth.

AFETY INFORMATION

. Lamp used must in rated voltage, and do not touch the bulb with bare hands Always switch off the electricity supply and allow to cool for 10 minutes efore changing the light bulbs.

. If the external cables have been demaged, Pls change or repair by nufacturer or service agency or professional electrician, In order to oid the danger.

A

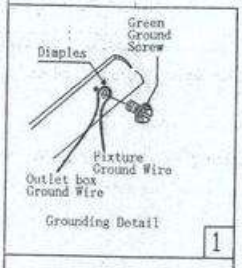

1

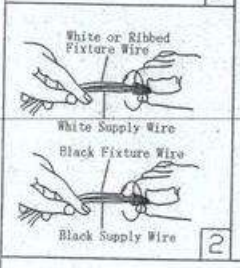

2

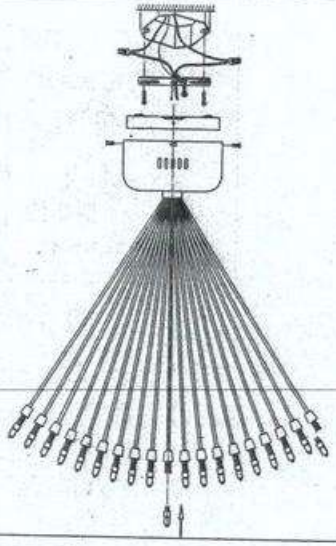

B

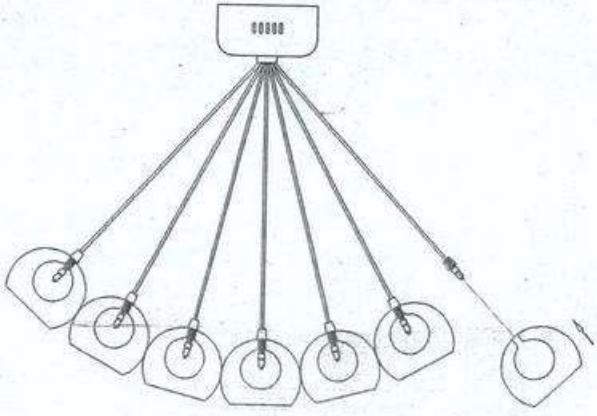

C